



Dremel 7300 MiniMite Cordless Battery Replacement

Sometimes the battery needs to be replaced. This guide will help make sure that the new battery is charged and operational.

Written By: Kat




INTRODUCTION

This guide will walk you through how to replace the battery in your Dremel 7300 Mini Mite Cordless Device.

Step 1 — Battery



- Pull back on the release tabs to disconnect the old battery pack from the housing, and discard.

 The new battery will most likely need to be charged.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 04:42:16 AM.